


TECHNICAL SPECIFICATIONS

Brunswick

Pressure balance mixing valve with integral diverter

code | 256 611 xxx
255 611 xxx

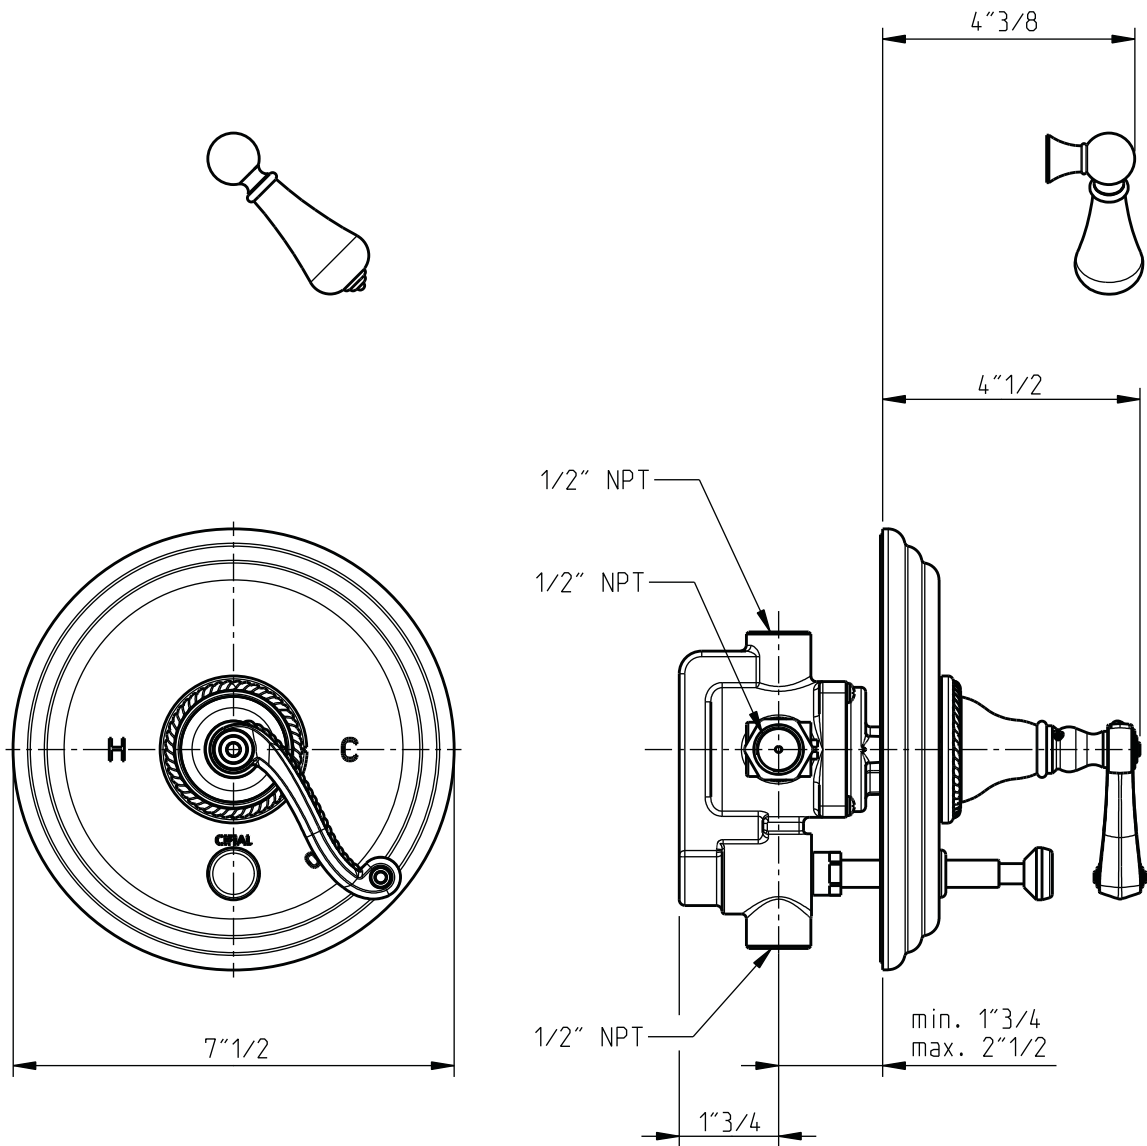

Rough: 289 710 999 (sold separately)

5663519
983ER017W03

dimensions inches


PLUMBING

CIFIAL USA
USA P+1800 5284904 F+1800 5281969 info@cifialusa.com www.cifialusa.com
CIFIAL Torneiras, S.A.
Portugal T+351 256 780 700 F+351 256 780 710 cifial@cifial.pt www.cifial.pt
CIFIALDECOR, S.A.
Espanha T+34 916 110 261 F+34 916 103 694 cifialdecor@infonegocio.com
CIFIAL UK, Ltd.
UK P+44 1933 402 008 F+44 1933 402 063 sales@cifial.co.uk www.cifial.co.uk



Assembly instructions

- 1| Place **stem extension** onto valve stem using **screw**.
- 2| Slide **face plate** into place and engage **stem extension** using **face plate screws**.
- 3| Set high temperature limit stop by turning handle drive shaft counter clockwise until desired maximum temperature is reached. Place **temperature limit ring** onto handle drive shaft with arm set next to limit stop pin. Turn handle drive shaft clockwise to shut off valve.
- 4| Place **rosette** onto handle drive shaft and align mark with off position. Thread **bonnet** into drive shaft. Align **lever handle** with off position and tight with **set screw**.
- 5| Assembly according to sequence:
 - a) thread **diverter extension** into body valve diverter spindle;
 - b) thread **diverter sleeve** into **pressure balance rough valve with diverter**;
 - c) thread **diverter pull knob** into **diverter extension**.

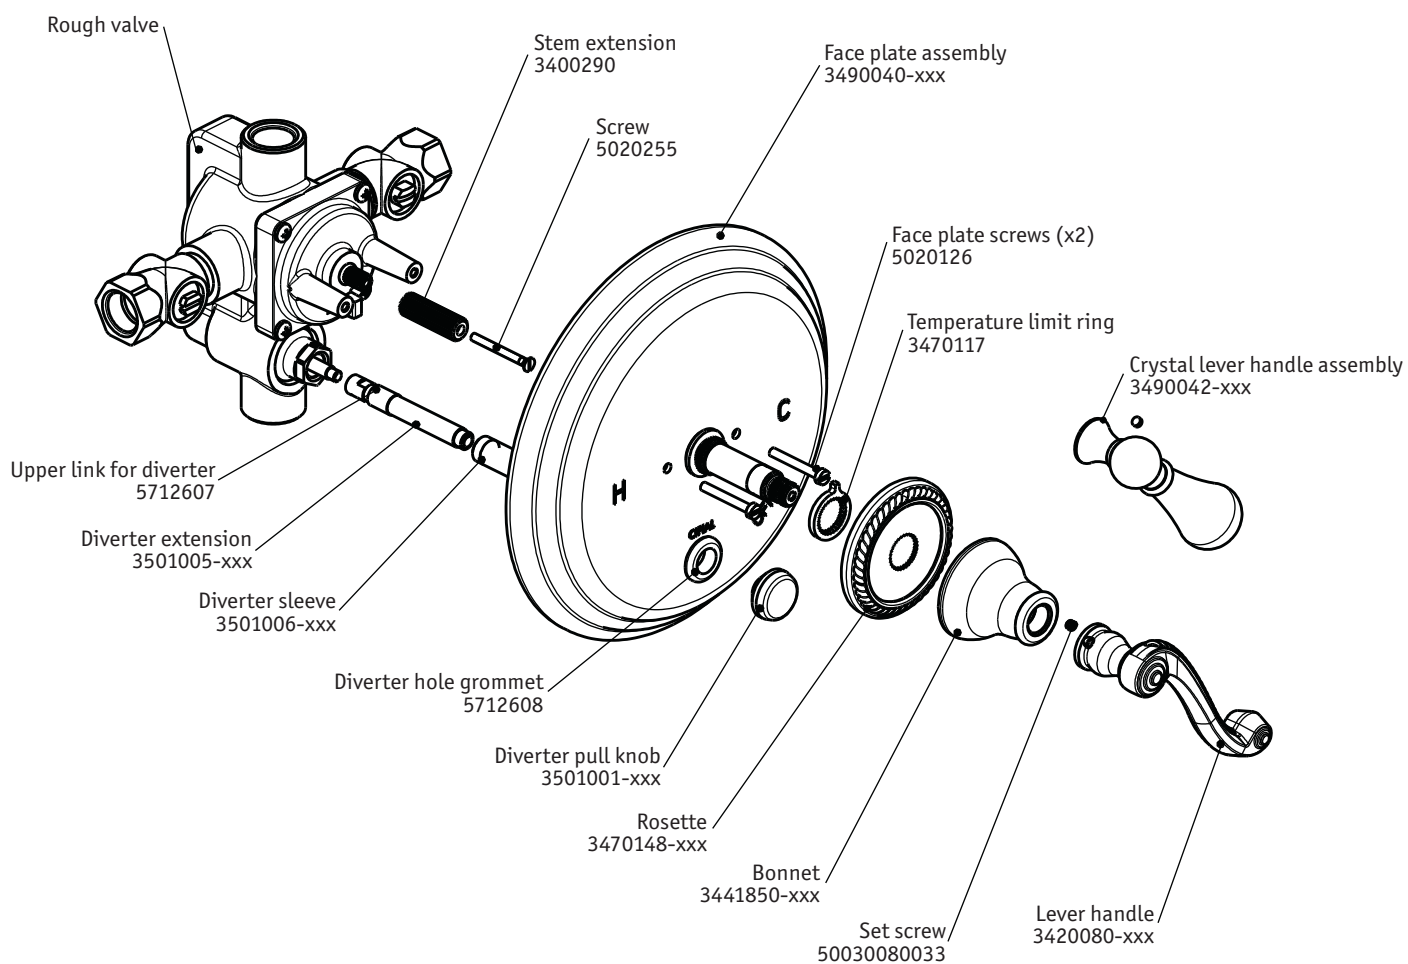

5663519
983ER017W03

Note: xxx represent different finishes.